


INTERRUPT CARD

Remove E1 FOR TENX

CONNECTOR (PLUG)

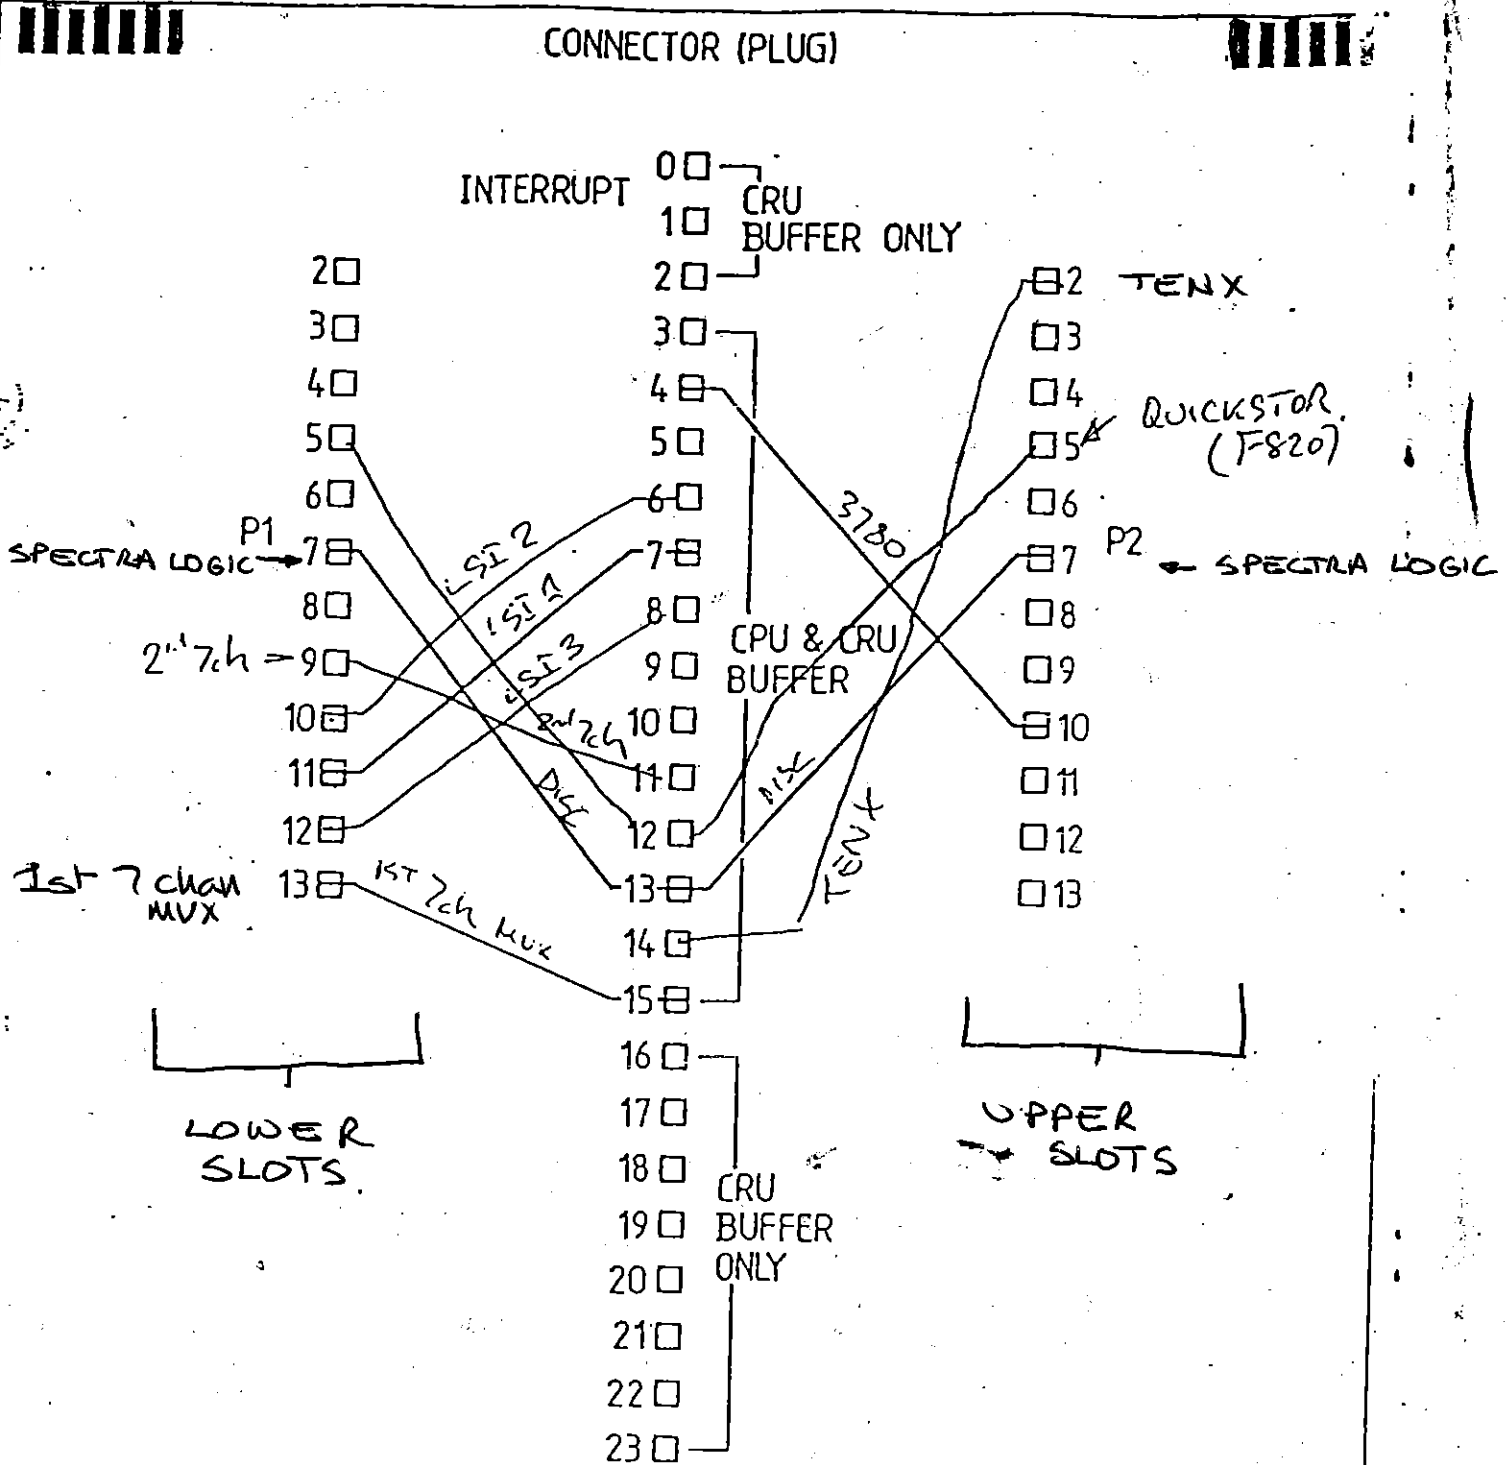

LOWER

UPPER

INTERRUPT CARD INPUT/OUTPUT CONNECTIONS

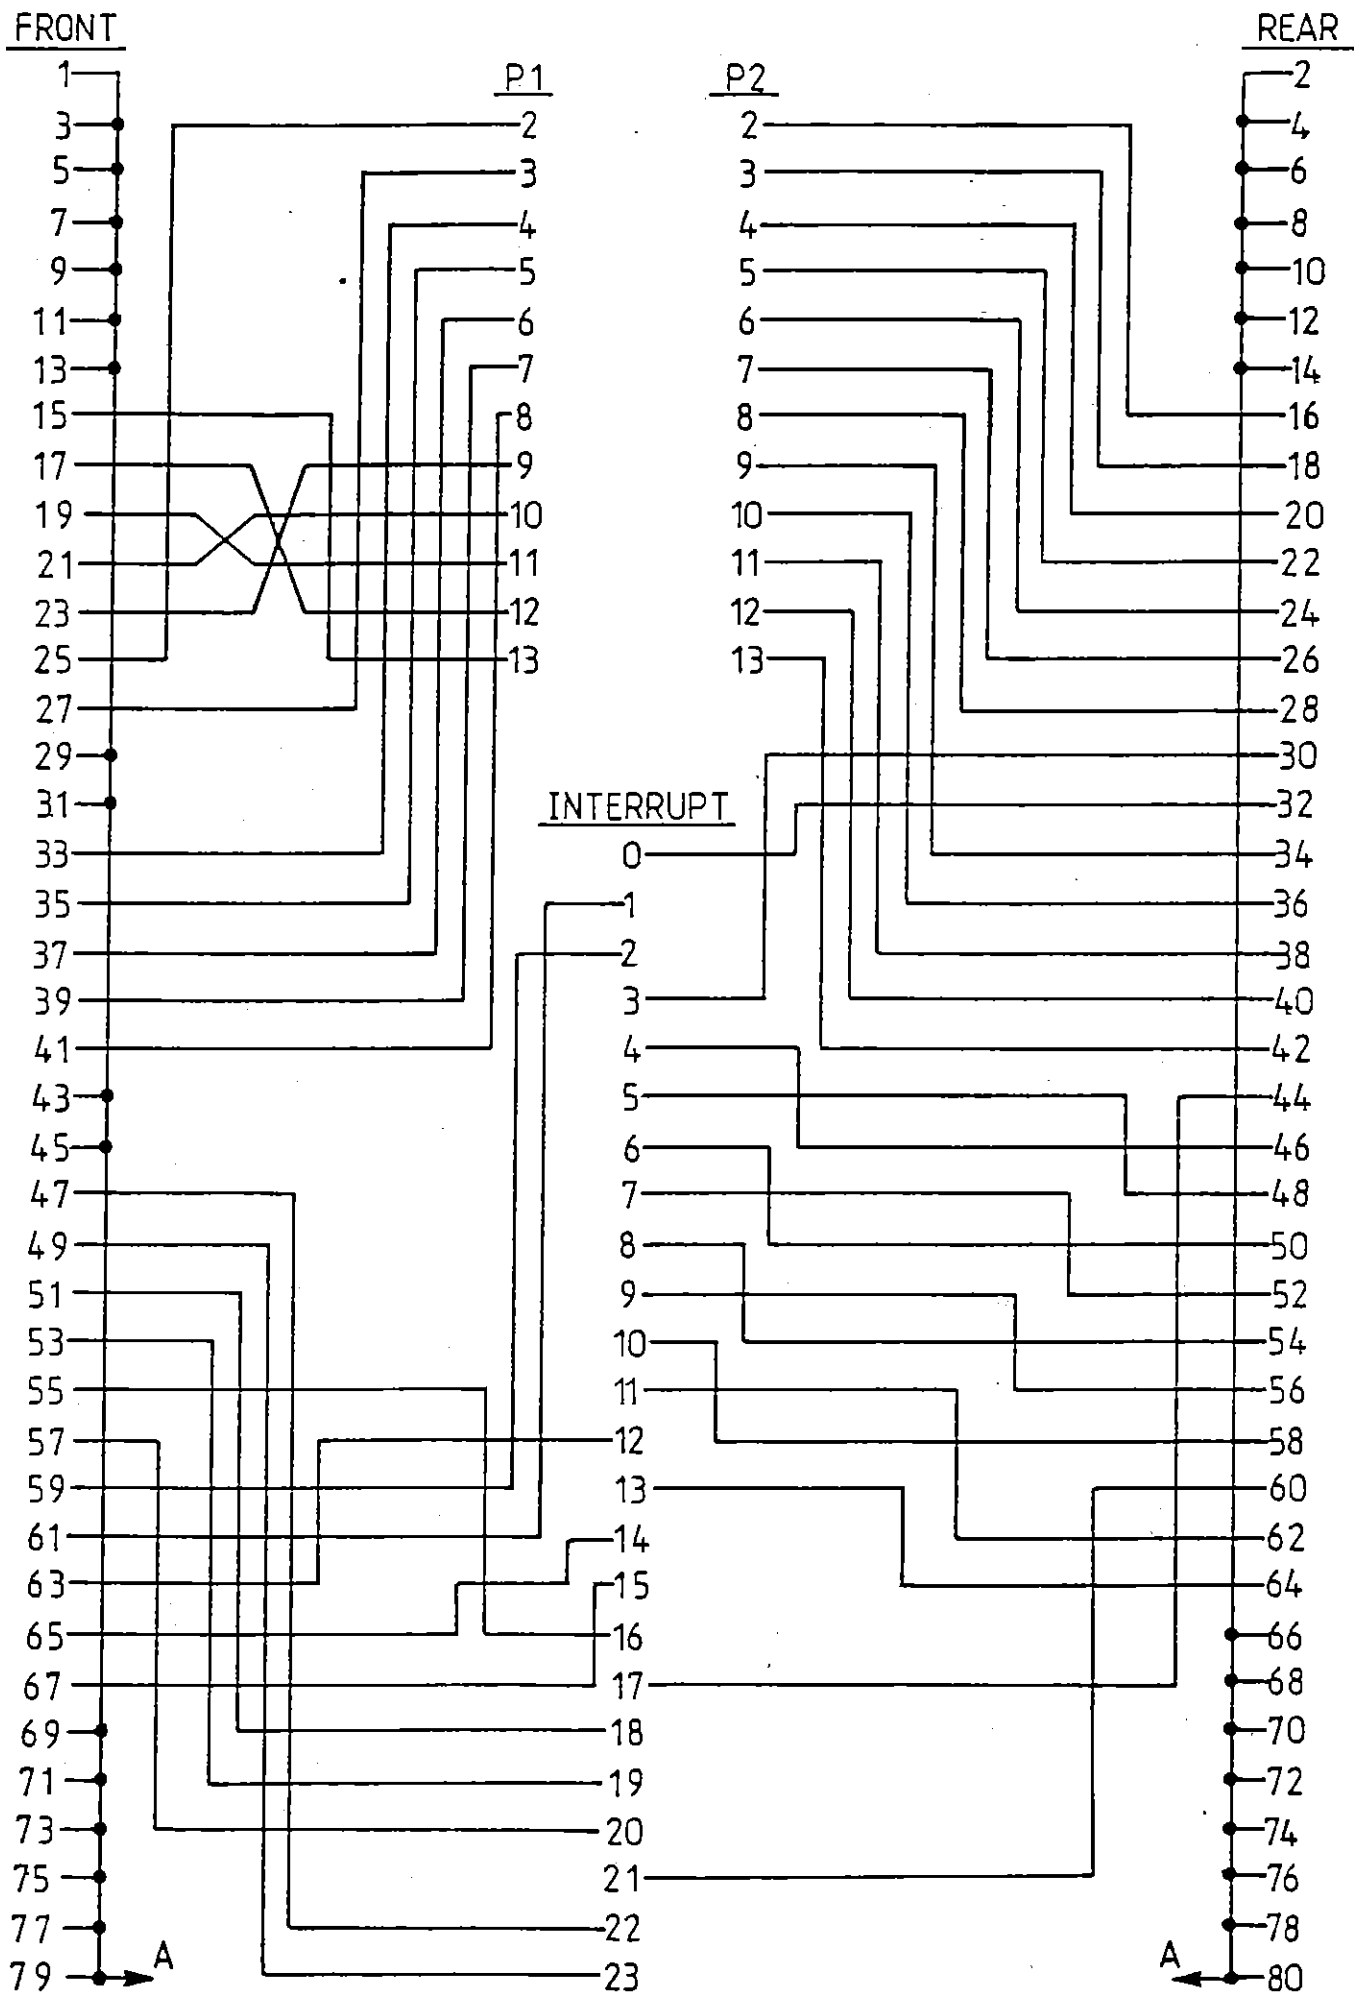


FIG. 2